Language TOC.fm Page i Tuesday, February 14, 2006 5:39 PM

English I

Türkçe 20

CLA Creative Wireless Headset CB2462.fm Page 1 Friday, August 11, 2006 10:47 AM

About Your Creative Wireless Headset CB2462

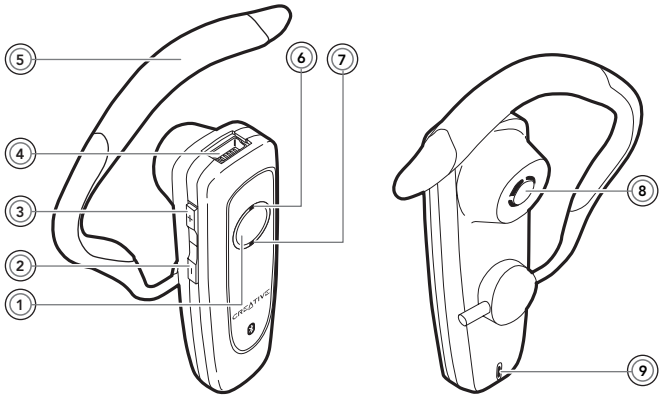

1. **Multi-function button**
2. **Volume Decrease button**
3. **Volume Increase button**
4. **Mini-B USB charging port**
5. **Ear hook**
6. **Red Light Emitting Diode (LED)**
7. **Blue Light Emitting Diode (LED)**
8. **Earpiece**
9. **Microphone**

Getting Started

Your Creative Wireless Headset CB2462 with Bluetooth® technology is one of the latest and most flexible headsets from Creative. Read on to learn how to get started with your new device!

1 Charge Your Headset

Fully charge your headset before using it for the first time. To charge your headset, connect the power adapter to your headset's mini-B USB charging port. During charging, the red LED lights up. When your headset is fully charged, the blue LED lights up. This takes approximately three hours. Consequently, charging your headset takes two hours.

2 Pair Your Headset and Mobile Phone

Before using your headset for the first time, pair it with a Bluetooth-enabled mobile phone.

1. Place your headset within one meter (three feet) of your mobile phone.
2. Turn on your headset by pressing and holding the Multi-function button until the blue LED flashes three times.
3. Press and hold the Multi-function button and Volume Decrease button until the blue and red LEDs flash alternately. You have two minutes to pair your devices before your headset quits pairing mode.

4. Turn on your mobile phone's Bluetooth feature. For more information, see your mobile phone's documentation.

   NOTES
   - You can also pair your headset to a computer with your Bluetooth adapter (available separately). For more information, see your device manufacturer's documentation.

5. Set your mobile phone to detect Bluetooth-enabled devices.
6. From the list that appears on your mobile phone, select **CB2462Creative**.
7. When prompted by your mobile phone for a passkey, enter **0000**. The blue LED on your headset flashes three times when the devices are paired successfully. Some mobile phones may require an additional connection step after pairing.

You can now start to make and receive calls from your headset. For more usage information, see section "Using Your Headset" on page 5.

NOTES
- To quit pairing mode, press the Multi-function button.
- When you are not using your headset and your mobile phone is turned on, your headset goes into standby mode. The blue LED flashes once every five seconds.
- When using your headset with your mobile phone, make sure that they are within 10 meters (32.8 feet) of each other. This distance may vary depending on your mobile phone's settings, operation and environment.

3 Adjust Your Headset

Your headset can be worn over your left or right ear. Refer to the diagram below to reposition the ear hook for use over the right ear.

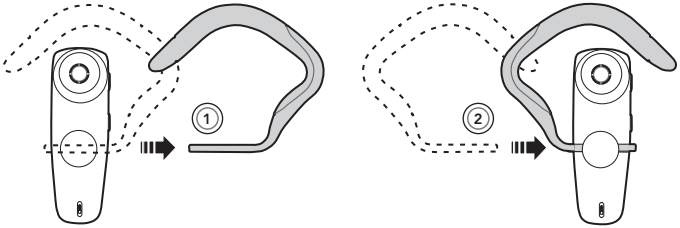

A feature of this headset is the 3-way ear hook adjustment to allow for the best fit.

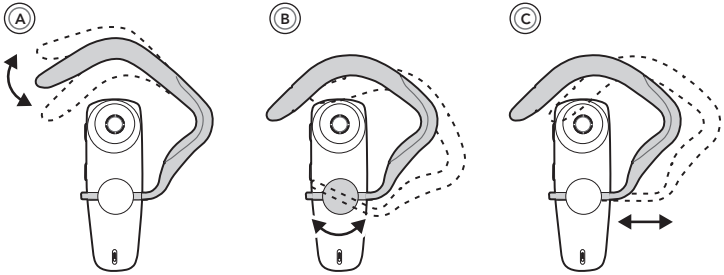

Using Your Headset

Usage*	Action
Turning on your headset	Press and hold the Multi-function button until the blue LED flashes three times.
Turning off your headset	Press and hold the Multi-function button until the red LED flashes three times.
Going into pairing mode	Turn on your headset. Press and hold the Multi-function button and Volume Decrease button until the blue and red LEDs flash alternately.
Answering a call	Press the Multi-function button. You can also answer the call using your mobile phone.
Ending a call	Press the Multi-function button. You can also end a call using your mobile phone.
Rejecting a call	Press the Multi-function button for three seconds.
Muting a call	Press and hold the Volume Increase button for three seconds. To unmute a call, repeat the action.
Holding a call	Press and hold the Volume Decrease button for three seconds. To resume a call, repeat the action.
Answering a second call and putting the first caller on call waiting	Press and hold the Volume Decrease button for three seconds. To switch calls, repeat the action.
Making a conference call	Press and hold the Volume Increase button for six seconds.
Toggling between your headset and mobile phone	Press and hold the Volume Decrease button for six seconds.

Usage*	Action
Using Voice Dial	Press the Multi-function button once and when you hear an alert tone, say the voice tag.
Dialling the last called number	Press and hold the Volume Decrease button for three seconds.
Adjusting volume	Press the Volume Increase button to increase the volume. Press the Volume Decrease button to decrease the volume.

*Some features are available only with selected service providers or mobile phones. For more information, refer to your service provider's policies or your mobile phone's documentation.

Headset LED behavior

Your headset's LED indicates the mode your headset is in.

LED behavior	Meaning
Blue LED flashes three times.	Headset is turned on.
Red LED flashes three times.	Headset is turned off.
Blue LED flashes once every five seconds.	Headset is in Standby mode.
Blue LED flashes once every 10 seconds.	Call is in progress.
Red LED flashes once every five seconds.	Battery is almost depleted.
Blue and red LEDs flash alternately.	Headset is in pairing mode.
Red LED lights up.	Charging is in progress.
Blue LED lights up.	Headset is fully charged.

Frequently Asked Questions

My headset and mobile phone are not pairing. What do I do?

Do one or more of the following:

- Check that your mobile phone's Bluetooth feature is turned on.
- Make sure that your headset is turned on, fully charged and is within one meter (three feet) of your mobile phone when pairing.
- Check that there are no obstructions, such as walls or other electronic devices, between your headset and mobile phone.

What is the optimal operating distance between my headset and mobile phone?

When using your headset with the mobile phone, make sure the working distance between your headset and mobile phone remains within 10 meters (32.8 feet). This distance may vary depending on your mobile phone's settings, operation and environment. Your headset works best when there are no obstructions (for example, walls or other electronic devices) between your headset and mobile phone. If your headset is too far away from the mobile phone, you may hear some crackling sounds.

Will my headset interfere with my computer or car's electronic devices?

You should not experience any interference when using your headset near standard consumer-grade electronics equipment.

Can other Bluetooth mobile phone users accidentally listen in on my conversation?

When you pair your headset to your mobile phone, you are creating a private link between both devices. The Bluetooth technology prevents monitoring by third parties.

Can I use my headset with other products?

Your headset will work with all Bluetooth version 1.1 or higher devices. These devices, however, must have the Headset or the Handsfree profile. For more information on international Bluetooth standards, go to **www.bluetooth.com**.

General Specifications

Bluetooth technology	Version 1.2 Bluetooth Class 2 Radio, up to a distance of 10 meters (32.8 feet)*, on line of sight.
Supported Bluetooth profile	Headset and Handsfree profiles
Battery type	Rechargeable Lithium-Ion polymer battery
Talk time*	Up to 9 hours
Standby time*	Up to 240 hours
Power adapter	Output 5V DC, 500 mA
Output power	4 dBm max
Operating frequency range	2.402–2.483 GHz band

*This may vary depending on your mobile phone's settings, operation and environment.

Creative Customer Support Services

At Creative, in addition to giving you the best products, we are committed to providing you with a comprehensive range of support services. These support services are designed to assist you with the setup and use of your Creative product. In order to provide you with an accurate and timely response, please have the following information available beforehand:

- ❑ Name, model and serial number of your Creative product
- ❑ Computer make, model and operating system, for example, Microsoft® Windows® XP
- ❑ Details of your question, such as any message boxes that appear
- ❑ Place and date of purchase

To access our support services, go to **www.creative.com/support**.

Support Services

Knowledge Base

www.creative.com/support/

Creative's Knowledge Base empowers you to quickly find solutions to your questions. Using natural language support and stepping you through targeted questions, the Knowledge Base will help you pinpoint the best solution to your particular question. The Knowledge Base also provides access to Frequently Asked Questions (FAQs) and Technical Specifications on Creative products.

Email

Should a solution be unavailable on the Creative Knowledge Base, you can contact our support staff through email by completing our web-based form (see the Customer Support Services Centers section for information on regional email addresses).

Product Documentation

In addition, the Creative web site contains an extensive library of product installation and user guides for your Creative product.

Telephone

Where web access is unavailable, you may contact our service support team via telephone. Telephone numbers can be found in the Customer Support Services Centers section.

Product Registration and Returns

Registering your Product

In order to provide you with better support services, we ask that you register your product. You can do this when installing your product or, alternatively, you can go to **www.creative.com/register** and register online. Please note that your warranty rights are not dependent on product registration.

There are a host of benefits to registering your product, such as:

- ❑ Email notifications of attractive promotions and events.
- ❑ News and tips on upcoming products.

All information you provide us will not be shared with others unless we have your permission to do so. You always have the choice to receive or not to receive future mails. Your information is safeguarded under the terms of our Privacy Policy. For more information about our Privacy Policy, visit **www.creative.com/legal/privacy.asp**.

Returning your Product for Warranty Service

You must provide proof of purchase (an itemized dated receipt) to be eligible for warranty service. You should retain your proof of purchase for the duration of the Warranty Period. Warranty service is only applicable if the product was purchased by you from an authorized Creative retailer, and will not be provided for any product that has not been purchased as new or was obtained as a result of the purchase of a non-Creative product. You should also retain all product contents and packaging in case you need to return your product for warranty or factory service.

A copy of the warranty is available on the product installation CD, or together with your product.

If a problem develops during the Warranty Period, follow the step-by-step procedures below for returning your product for warranty service:

1. Contact your local Creative Customer Support Services Center. Regional contact information is provided below.
2. For customers in Asia Pacific, the Middle East and Africa, you should first contact the dealer who sold you the product, as your dealer may be able to assist you. To find your nearest authorized dealer, go to www.asia.creative.com/support
3. Have your proof of purchase available to validate your Warranty.
4. After the product has been determined to require warranty service, you will be issued a Return Merchandise Authorization (RMA) number. All products returned to Creative for warranty service must have a RMA number.
5. Write the RMA number on the outside of the package. Creative will not accept a return that does not have an RMA number on the outer packaging.
6. Return only the defective item(s). Creative is not responsible for other products or accessories returned with the defective item.
7. If applicable, you should remove or make a backup copy of any data stored on the product prior to shipping the product to Creative. All data will be deleted from the product during repairs. Creative is not responsible or liable for any data stored on the product that is lost, deleted, or is otherwise inaccessible.

Shipping Charges and Tariffs

Shipment to Creative is at your expense and at your own risk (including any loss or damage to the product during shipment). We recommend using proper packing materials (including using the original product package), shipping the package through a carrier that provides proof of delivery and insuring the shipment at full product value.

To avoid any applicable tariffs when shipping a product to Creative from outside the United States, the European Union, or from zones with special tax status, you must complete the relevant customs documentation before shipping the product. If the relevant customs documentation has not been completed, in order to ensure return delivery to you, Creative will include charges for any applicable tariffs applied to the shipment (whether to or from Creative).

Customer Support Services Centers

Asia, the Middle East and Africa

Unless otherwise stated, support is in English.

Customer Support Services centers are found in:

- Australia and New Zealand
- Hong Kong and Macau
- India
- Japan
- Mainland China
- Malaysia
- Singapore
- Taiwan
- UAE and the Middle East

If you purchased your product from a country or region elsewhere from the above, please contact the Singapore office.

Australia and New Zealand

Web	Email:	Mailing Address & Customer Care Center:	Telephone:
http://au.creative.com/support/	http://au.creative.com/support/contact/emailform.asp	Creative Labs Pty Ltd Customer Support Services, Unit 31 Homebush Business Village, 11-21 Underwood Street, Homebush, NSW 2140 Australia *Operating Hours* 8.30 a.m - 5:30 p.m, Monday - Friday Australia Eastern Standard Time (Closed on Public Holidays)	Australia: 1300 78 8528 New Zealand: (61) 1300 78 8528 *Operating Hours* 11.00 a.m - 7.00 p.m, Monday - Friday Australia Eastern Standard Time (Closed on Public Holidays)

Hong Kong and Macau

Web	Email:	Mailing Address & Customer Care Center:	Telephone:
http://hk.creative.com/support/	Traditional Chinese: http://hk.creative.com/support/contact/emailform.asp?c=1 English: http://hk.creative.com/support/contact/emailform.asp	Creative Labs (Hong Kong) Ltd Customer Support Services, Rm 2807, 28/F, Metroplaza Tower I, 223 Hing Fong Road, Kwai Fong NT Hong Kong *Operating Hours* 9:15 a.m - 12:15 p.m & 1:45 p.m - 5:45 p.m, Monday - Friday 9:15 a.m - 12:45 p.m, Saturday (Closed on Public Holidays)	Hong Kong: 2331 2930 Macau: (852) 2331 2930 *Operating Hours* 9:15 a.m - 12:15 p.m & 1:45 p.m - 5:45 p.m, Monday - Friday 9:15 a.m - 12:45 p.m, Saturday (Closed on Public Holidays)

India

Web	Email:	Mailing Address & Customer Care Center:	Telephone:
http://in.creative.com/support/	http://in.creative.com/support/contact/emailform.asp	Creative Care Centre (Authorised) Patel Industrial Estate, Gala No 1,2,3 Near Sai Service, Sativali Kaman Road, Vasai East, Thane 401208 Maharashtra, India. *Operating Hours* 10:00 a.m - 6:30 p.m, Monday - Saturday India Standard Time (Closed on Public Holidays)	English: (65) 6895 4100 *Operating Hours* 11:00 a.m - 7:00 p.m, Monday - Friday Singapore Time [UTC+8:00] (Closed on New Year, Chinese New Year and Christmas)

Japan

Web	Email:	Mailing Address & Customer Care Center:	Telephone:
Japanese: http://jp.creative.com/support/	Japanese: http://jp.creative.com/support/contact/emailform.asp English: http://asia.creative.com/support/contact/emailform.asp	Creative Media K K Customer Support Services, c/o Maruko & Co, Ltd, 1271 Chogo, Fujisawa City, Kanagawa 252-0801, Japan	Japanese: (03) 3254 0393 *Operating Hours* 10:00 a.m - 12:00 p.m & 1:00 p.m - 5:00 p.m, Monday - Friday (Closed on Public Holidays, Summer Holiday, Year-End and New Year)

Mainland China

Web	Email:	Mailing Address:	Customer Care Centers				Telephone:
Simplified Chinese: http://cn.creative.com/support/	Simplified Chinese: http:/cn.creative.com/support/contact/emailform.asp English: http://asia.creative.com/support/contact/emailform.asp	Creative Hohan Technology Ltd Customer Support Services, P O Box 8968 Beijing 100089, P.R.China	Beijing	Shanghai	Guangzhou	Chengdu	Mandarin: (010) 8255 1800 [Extensions: 8301 - 8305]
			15 Wanquan Zhuang Road, Haidian District, Beijing 100089, P.R.China	16 Lane 647 Songtao Road, Zhangjiang Hi-tech Park, Pudong New District, Shanghai 201203, P.R.China	No 625 Tianhe Road, Room 2001 Eastern Tower, Tianhe Entertaiment Plaza, Tianhe Distrct, Guangzhou City, Guangdong 510630, P.R.China.	No.1 Section 4 Renmin South Road, Room 230 2F Digital Square, Chengdu City, Sichuan 610041, P.R.China	
			Operating Hours 9:00 a.m - 6:00 p.m, Monday - Saturday (Closed on Public Holidays)	*Operating Hours* 9:00 a.m - 6:00 p.m, Monday - Friday (Closed on Public Holidays)	*Operating Hours* 9:00 a.m - 6:00 p.m, Monday - Friday (Closed on Public Holidays)	*Operating Hours* 9:00 a.m - 6:00 p.m, Monday - Friday (Closed on Public Holidays)	*Operating Hours* 9:00 a.m - 6:00 p.m, Monday - Saturday (Closed on Public Holidays)

Malaysia

Web	Email:	Mailing Address & Customer Care Center:	Telephone:
http://asia.creative.com/support/	http://asia.creative.com/support/contact/emailform.asp	Creative Labs Sdn Bhd Customer Support Services, 22 Jalan Imbi, Unit 1106 Level 11 Amoda, 55100 Kuala Lumpur, Malaysia *Operating Hours* 9:00 a.m - 5:30 p.m, Monday - Friday (Closed on Public Holidays)	English: (65) 6895 4100 *Operating Hours* 11:00 a.m - 7:00 p.m, Monday - Friday (Closed on New Year, Chinese New Year and Christmas)

Singapore

Web	Email:	Mailing Address:	Customer Care Centers		Telephone:
http://sg.creative.com/support/	http://sg.creative.com/support/contact/emailform.asp	Creative Technology Ltd Customer Support Services, 31 International Business Park, Creative Resource, Singapore 609921	The Creative Store 31 International Business Park, Creative Resource, Singapore 609921 *Operating Hours* 11:00 a.m - 7:00 p.m, Monday - Sunday (Closed on Chinese New Year)	The Creative Store @ Marina Square 6 Raffles Boulevard, #03-123/124 Marina Square, Singapore 039594 *Operating Hours* 11:00 a.m - 10:00 p.m, Monday - Sunday (Closed on Chinese New Year)	English: (65) 6895 4100 *Operating Hours* 11:00 a.m - 7:00 p.m, Monday - Friday (Closed on New Year, Chinese New Year and Christmas)

Taiwan

Web	Email:	Mailing Address & Customer Care Center:	Telephone:
Traditional Chinese: http://tw.creative.com/support/	Traditional Chinese: http://tw.creative.com/support/contact/emailform.asp English: http://asia.creative.com/support/contact/emailform.asp	Creative Labs Taiwan Co, Ltd Customer Support Services, 2F No.5 Lane 345 Yangguang Street, Neihu District, Taipei City 114-68, ROC Taiwan *Operating Hours* 9:00 a.m - 12:00 p.m & 1:00 pm - 6:00 pm, Monday - Friday (Closed on on Public Holidays)	Mandarin: (02) 8797 2928 [Extensions 601 and 602] *Operating Hours* 9:00 a.m - 12:00 p.m & 1:00 p.m - 6:00 p.m, Monday - Friday (Closed on on Public Holidays)

UAE and the Middle East

Web	Email:	Mailing Address:	Telephone:
http://ae.creative.com/support/	http://ae.creative.com/support/contact/emailform.asp	Creative Labs (Middle East) FZE Customer Support Services, PO Box 17506, Jebel Ali Free Zone, Dubai, United Arab Emirates	English: (65) 6895 4100 *Operating Hours* 11:00 a.m - 7:00 p.m, Monday - Friday Singapore Time [UTC+8:00] (Closed on New Year, Chinese New Year and Christmas)

Other regions including Turkey and Africa

Web	Email:	Mailing Address:	Telephone:
Turkey: http://tr.creative.com/support/ Others: http://asia.creative.com/support/	Turkey: http:/tr.creative.com/support/contact/emailform.asp Others: http://asia.creative.com/support/contact/emailform.asp	Creative Technology Ltd Customer Support Services, 31 International Business Park, Creative Resource, Singapore 609921, Republic of Singapore	English: (65) 6895 4100 *Operating Hours* 11:00 a.m - 7:00 p.m, Monday - Friday Singapore Time [UTC+8:00] (Closed on New Year, Chinese New Year and Christmas)

Creative Limited Warranty

Creative Technology Ltd. ("Creative") warrants that the retail hardware product herein ("Product") is free of material defects in materials and workmanship that result in Product failure during normal usage, according to the following terms and conditions:

1. The limited warranty extends only to the original end-user purchaser and holder of this warranty ("You" or "Your") and is not transferable or assignable to any subsequent purchaser.
2. You must provide proof of purchase of the Product by a dated itemized receipt to be eligible for this limited warranty.
3. The limited warranty is ONLY applicable in the country or territory where the product was purchased from an authorized Creative retailer and excludes any product that has not been purchased as new or is obtained as a result of the purchase of a non-Creative product.
4. During the Warranty Period (as provided below), Creative will repair, or replace, at Creative's sole option, any defective parts or any parts that will not properly operate for their intended purpose with new or refurbished parts if such repair or replacement is needed.
   a. The limited warranty for the Product extends for **ONE (1) year** from the date of your purchase ("Warranty Period"). The warranty period will be extended by each whole day that the Product is out of Your possession for repair under this warranty.
   b. Creative will pay for the labor charges incurred by Creative in repairing or replacing the defective parts during **the Warranty Period** from the date of your purchase.
   c. You will not have to pay for any such replacement parts.
   d. Creative also warrants that the repaired or replaced parts will be free from defects in material and workmanship for a period of NINETY (90) days from the date of repair or replacement, or for the remainder of the Warranty Period, whichever is greater.
5. Creative does not warrant uninterrupted or error-free operation of the Product. Creative is not under any obligation to support the Product for all operating environments, including but not limited to, interoperability with all current and/or future versions of software or hardware.
6. For Products that are capable of storing data: Creative is not responsible or liable for any data stored on the Product that is lost, deleted, or is otherwise inaccessible. All data will be deleted from the Product during repairs. You should remove or make a backup copy of any data stored on the Product prior to shipping the Product to Creative.
7. If a problem develops during the Warranty Period, please refer to the Product Returns section of the Creative Customer Support Services documentation accompanying the Product. This document will provide you with contact information for a local Creative office and step-by-step procedures for returning the Product for warranty service.
   a. You must provide proof of purchase of the Product by a dated itemized receipt.
   b. You will bear the cost of shipping the Product to Creative. Creative will bear the cost of shipping the Product back to You after completing the warranty service.
   c. You must be issued a Return Merchandise Authorization (RMA) number. Write the RMA number on the outside of the package. Creative will not accept a return that does not have a RMA number on the outer packaging.
   d. Only return the defective item(s). Creative is not responsible for other products or accessories returned with the defective item.
8. The limited warranty does not apply to:

a. Damage caused by normal wear and tear, abnormal use or conditions, misuse, neglect, abuse, accident, improper handling or storage, exposure to moisture, unauthorized modifications, alterations, or repairs, improper installation, improper use of any electrical source, undue physical or electrical stress, operator error, non-compliance with instructions or other acts which are not the fault of Creative, including damage or loss during shipment.

b. Damage from external causes such as floods, storms, fires, sand, dirt, earthquakes, an Act of God, exposure to sunlight, weather, moisture, heat, or corrosive environments, electrical surges, battery leakage, theft, or damage caused by the connection to other products not recommended for interconnection by Creative.

c. Damage or loss of data due to (i) interoperability with current and/or future versions of operating systems or other current and/or future software and hardware, (ii) a computer virus, worm, Trojan horse or memory content corruption, or (iii) malfunction or defect of the Product.

d. Counterfeit products or any accompanying products not bearing a Creative serial number provided with the Product, or in the case of communications products, the use of the Product outside the borders of the country intended for use (as indicated by local telecommunication approval stickers).

e. Any Product that has had its serial number altered, defaced or removed.

f. Any defect occurring after the expiration of the Warranty Period or where Creative was not advised in writing of an alleged defect or malfunction within seven (7) days after the expiration of the Warranty Period.

9. Creative's limit of liability under the limited warranty is the actual cash value of the Product at the time You return the Product for repair (e.g., the purchase price of the Product less a reasonable amount for usage). Creative will not be liable for any other losses or damages. These remedies are Your exclusive remedies for breach of warranty. Any action or lawsuit for breach of warranty must be commenced within eighteen (18) months following the purchase of the Product.

10. THE FOREGOING LIMITED WARRANTY IS YOUR SOLE AND EXCLUSIVE REMEDY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. TO THE EXTENT PERMITTED BY APPLICABLE LAW, CREATIVE HEREBY DISCLAIMS THE APPLICABILITY OF ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR USE FOR THE PRODUCT. IF SUCH A DISCLAIMER IS PROHIBITED BY APPLICABLE LAW, THE IMPLIED WARRANTY IS LIMITED TO THE DURATION OF THE FOREGOING LIMITED WRITTEN WARRANTY.

11. CREATIVE WILL NOT BE LIABLE FOR ANY INDIRECT, INCIDENTAL, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES, OR DAMAGES, INCLUDING BUT NOT LIMITED TO ANY LOST PROFITS, SAVINGS, DATA, OR LOSS OF USE, ANY THIRD PARTY CLAIMS, AND ANY INJURY TO PROPERTY OR BODILY INJURY (INCLUDING DEATH) TO ANY PERSON, ARISING FROM OR RELATING TO THE USE OF THIS PRODUCT OR ARISING FROM BREACH OF THE WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, TORT, OR STRICT LIABILITY, EVEN IF CREATIVE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

12. This warranty gives You specific legal rights. You may also have other rights, which vary from state to state and country to country. Some states and countries do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to You.

13. This is the entire warranty between You and Creative and supercedes all prior and contemporaneous agreements or understandings, oral or written, relating to the Product, and no representation, promise or condition not contained herein will modify these terms.

Version 2.0 June 2004

Safety Information

Refer to the following information to use your product safely, and to reduce the chance of electric shock, short-circuiting, damage, fire, hearing impairment or other hazards.

NOTES Improper handling may void the warranty for your product.
For more information, read the Warranty available with your product.

- Do not dismantle or attempt to repair your product, battery or power adapter. **Refer all servicing to Creative or authorized repair agents.**
- Do not expose your product or battery to temperatures outside the range of 0°C to 45°C (32°F to 113°F).
- Do not pierce, crush or set fire to your product or battery.
- Keep your product or battery away from strong magnetic objects.
- Do not subject your product to excessive force or impact.
- Do not expose your product or battery to water or moisture.
  If your product is moisture-resistant (see product packaging for details), take care not to immerse your product in water or expose it to rain.
- Do not listen to audio at high volume for prolonged periods of time.
- Do not attempt to remove the embedded battery. The product must be disposed of according to local environmental regulations. To replace the battery, return your product to your regional support office. For product service information, go to **www.creative.com**.
- When a conductive apparatus such as earphones, is used in close proximity with a CRT television or CRT monitor, the latter may emit an electrostatic discharge. This electrostatic discharge can be felt as a static shock. While this static shock is usually harmless, it is good practice to avoid close contact with CRT devices when using earphones.
- Do not turn on or use your product in an airplane.

More Information

Creative Knowledge Base

Resolve and troubleshoot technical queries at Creative's 24-hour self-help Knowledge Base. Go to **www.creative.com**, select your region and then select **Support**.

Product Registration

Registering your product ensures you receive the most appropriate service and product support available. You can register your product during installation or at **www.creative.com/register**.

Please note that your warranty rights are not dependent on product registration.

Keep this document for future reference.

Copyright © 2006 Creative Technology Ltd. All rights reserved. The Creative logo is a registered trademark of Creative Technology Ltd. in the United States and/or other countries. Microsoft and Windows are registered trademarks of Microsoft Corporation. Bluetooth is a registered trademark of the Bluetooth SIG, Inc., USA.

Creative CB2462 Kablosuz Kulaklık kitiniz Hakkında

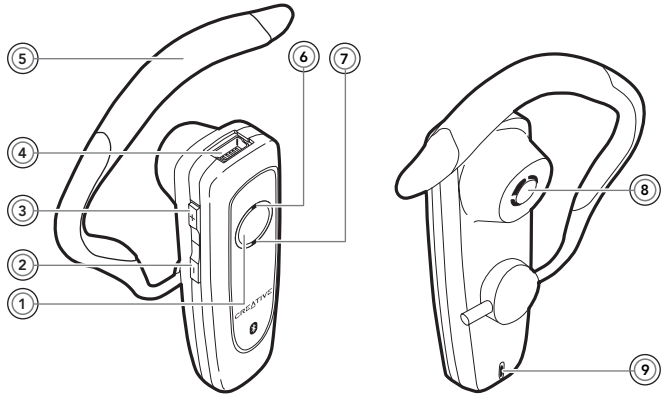

1. **Çok İşlevli Düğme**
2. **Ses Azaltan Düğme**
3. **Ses Artıran Düğme**
4. **Mini-B USB şarj girişi**
5. **Kulak Kancası**
6. **Kırmızı Işık Saçan Diyot (LED)**
7. **Mavi Işık Saçan Diyot (LED)**
8. **Kulaklık**
9. **Mikrofon**

Başlangıç

Creative CB2462 Bluetooth® teknolojisiyle donatılmış kablosuz kulaklık kitiniz Creative 'in en son ve en kullanışlı kulaklık kitinden biridir. Yeni aygıtınızı daha yakından tanımak için okumaya devam ediniz!

1 Kulaklık Kitinizin Şarj Edilmesi

İlk kullanımdan once kulaklık kitinizi tamamen şarj ediniz. Kulaklığınızı şarj etmek için güç adaptörünüzü Kulaklığınızın mini-B USB şarj girişine bağlayınız. Şarj esnasında, Kırmızı LED yanacaktır. Kulaklık tamamen şarj edildiğinde mavi LED yanacaktır. Bu ilk sefer için yaklaşık olarak üç saat sürmektedir. Genel olarak şarj süresi iki saattir.

2 Kulaklık kitiniz ile Cep Telefonunuzun Eşleştirilmesi

Kulaklık kitinizi ilk kullanımdan once, Bluetooth özelliği açik durumda olan cep telefonunuzla eşleştiriniz.

1. Kulaklık kitinizi, mobil telefonunuza bir metre uzakta olacak şekilde yerleştiriniz.
2. Kulaklık kitinizi açmak için, çok işlevli düğmeye mavi LED üç kez yanıp sönen kadar basılı tutunuz.
3. Çok işlevli düğme ile Ses Azaltıcı düğmeye mavi ve kırmızı LED 'ler değişimli olarak yanana kadar basınız. Aygıtları eşleştirmek için iki dakikanız vardır bu süreden sonra kulaklık kitiniz eşleştirme modundan çıkacaktır.

4. Cep telefonunuzun Bluetooth özelliğini etkin hale getiriniz. Cep telefonunuzun dökümanlarından yardım alabilirsiniz.

   NOT
   - Kulaklık kitinizi Bluetooth adaptor (ayrı olarak temin edilir) ile bilgisayarınıza bağlayabilirsiniz. Daha fazla bilgi için, aygıtı üreten firmanın dökümanlarını inceleyiniz.

5. Cep telefonunuzu Bluetooth özelliği açık olan aygıtları bulacak şekilde ayarlayınız.
6. Çıkacak olan listeden, **CB2462Creative** 'i seçiniz.
7. Cep telefonunuz tarafından şifre sorulduğu anda **0000** 'ı tuşlayınız. Kulaklık kitiniz üzerindeki mavi LED üç kez yanıp söndüğü anda eşleştirme başarılı bir şekilde tamamlanıcaktır. Bazı cep telefonlarında eşleştirme için ek bir bağlama adımıda isteyebilmektedir.

Kulaklık kitinizi Bluetooth adaptor (ayrı olarak temin edilir) ile bilgisayarınıza bağlayabilirsiniz. Daha fazla bilgi için, aygıtı üreten firmanın dökümanlarını inceleyiniz.

NOT
- Eşleştirme modundan çıkmak için, çok fonksiyon düğmesine basınız.
- Cep telefonunuz açık ve kulaklık kitinizi kullanmadığınız zamanlarda, kulaklık kiti bekleme moduna girecektir. Mavi LED her beş saniyede bir yanıcaktır.
- Kulaklık kitinizi, cep telefonunuzla birlikte kullandığınızda ikisi arasındaki mesafenin 10 metreyi geçmemesine dikkat ediniz. Bu mesafe cep telefonu ayarlarınıza veya çevre koşullarına göre çeşitlilik gösterebilir.

3 Kulaklığınızın Ayarlanması

Kulaklık kitiniz sağ veya sol kullağınıza göre ayarlanabilmektedir. Aşağıdaki diyagramda sağ kulağınıza göre ayarlanışı gösterilmektedir.

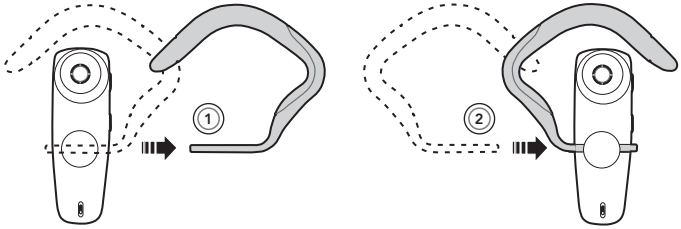

Bu kulaklık kitinizin bir özelliğide en iyi şekilde kulağa oturması için 3-yollu kancaya sahip olmasıdır.

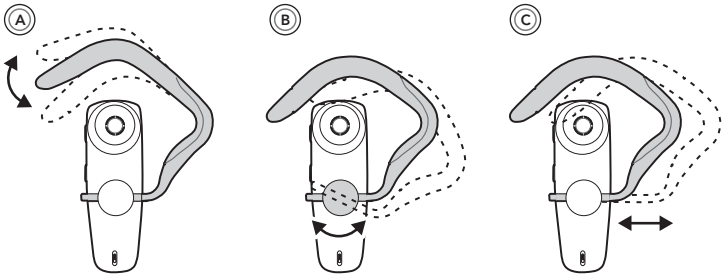

Kulaklık kitinizi Kullanmak

Kullanım*	Hareket
Kulaklık kitinizi açmak	Çok işlevli düğmesine mavi LED üç kez yanıp sönene kadar basınız.
Kulaklık kitinizi kapatmak	Çok işlevli düğmesine kırmızı LED üç kez yanıp sönene kadar basınız.
Eşleştirme moduna geçmek	Kulaklık kitinizi açınız. Çok fonksiyon düğmesiyle ses azaltan düğmesini mavi ve kırmızı LED 'ler değişimli olarak yanıp sönen kadar basılı halde tutunuz.
Aramaya cevap vermek	Çok fonksiyon düğmesine basınız. Aramaya cep telefonunuzdan da cevap verebilirsiniz.
Aramayı sonlandırmak	Çok işlevli düğmesine basınız. Cep telefonunuzdan da aramayı sonlandırabilirsiniz.
Aramayı iptal etmek	Çok işlevli düğmesini üç saniye süreyle basınız.
Gelen aramayı sessiz moda getirmek	Sesi artıran düğmeyi üç saniye basılı tutunuz. Sessiz aramayı iptal etmek için, ayni işlemi tekrarlayınız.
Gelen aramayı bekletmek	Sesi azaltan düğmeyi üç saniye basılı tutunuz. Aramaya devam etmek için, aynı işlemi tekrarlayınız.
İkinci bir aramaya cevap vermek ve ilk arayanı bekletmek	Sesi azaltan düğmeyi üç saniye basılı tutunuz. Aramaları değiştirmek için, aynı islemi tekrarlayınız.
Konferans konuşması yapmak	Sesi artıran düğmeyi altı saniye basılı tutunuz.

Kullanım*	Hareket
Kulaklığınız ile cep telefonunuz arasında Toggling yapmak	Sesi azaltan düğmeyi altı saniye basılı tutunuz.
Sesli arama yapmak	Çok işlevli düğmesine bir kere basınız ve uyarı tonu işittiğinizde, ses etiketini söyleyiniz.
Son aranan numarayı aramak	Ses azaltan dügmesini üç saniye süreyle basılı tutunuz.
Sesi Ayarlamak	Ses artıran düğmesine sesi artırmak için basınız. Ses azaltan düğmesine sesi azaltmak için basınız.

*Bazı özellikler sadece seçilen servis sağlayıcılar ve cep telefonlar tarafından desteklenmektedir. Daha fazla bilgi için, servis sağlayıcınızdan veya cep telefonunuzun dökümanlarından yararlanınız.

Kulaklık kiti LED durumları

Kulaklık kiti LED göstergeniz kulaklık kitiniz hangi modda olduğunu gösterir

LED durumları	Anlamı
Mavi LED üç kez yanıp söner.	Kulaklık kiti açılmıstır.
Kırmızı LED üç kez yanıp söner.	Kulaklık kiti kapanmıştır.
Mavi LED her beş saniyede bir yanıp söner.	Kulaklık kiti bekleme modundadır.
Mavi LED her on saniyede bir yanıp söner.	Arama işlemi gerçekleşmektedir.
Kırmızı LED her beş saniyede bir yanıp söner.	Pil neredeyse bitmek üzeredir.

LED durumları	Anlamı
Mavi ve kırmızı LED ler sırayla yanıp söner.	Kulaklık kiti eşleştirme modundadır.
Kırmızı LED belirir.	Şarj işlemi gerçekleşmektedir.
Mavi LED belirir.	Kulaklık kiti tamamen şarj edilmiştir.

Sıkça Sorulan Sorular

Kulaklık kitim ve cep telefonum eşleşmiyor. Ne yapmalıyım?

Aşağıdaki çözüm yollarını deneyiniz:

- Cep telefonunun Bluetooth özelliğinin açık olup olmadığını kontrol ediniz.
- Eşleştirme esnasında kulaklığınız açik, sarjlı ve cep telefonunuzdan bir metre uzakta olmasına dikkat ediniz.
- Kulaklık kitinizle, cep telefonunuz arasında duvar veya elektronik aygıt gibi engelleyicilerin bulunmamasına dikkat ediniz.

Kulaklık kitim ve cep telefonum arasındaki en uygun kullanım mesafesi nadir?

Kulaklık kitinizi cep telefonunuz ile beraber kullandığınızda aradaki mesafenin 10 metreyi aşmamasına dikkat ediniz. Bu mesafe cep telefonu ayarlarınıza veya çevre koşullarına göre çeşitlilik gösterebilir. Kulaklık kitinizin en iyi şekilde çalışması için kulaklık kitiniz ve cep telefonunuz arasında hiçbir engelin (örnek olarak, duvar veya elektronik aygıt) olmaması gerekmektedir. Eğer kulaklık kitiniz cep telefonunuzdan çok uzakta ise kulağınıza cızırtılı sesler gelebilir.

Kulaklık kitim, bilgisayarımı veya arabamın elektronik aygıtlarını etkilermi?

Kulaklık kitiniz hiç bir şekilde diğer tüketici sınıfı standart elektronik ekipmanlarla etkileşim içerisine girmez.

Diğer Bluetooth cep telefonu kullanıcıları yanlışlıkla benim görüşmemi dinleyebilirlermi?

Kulaklık kitinizi, cep telefonunuza eşleştirdiğinizde, iki cihaz arasında özel bir bağ oluşturursunuz. Bluetooth teknolojisi üçüncü şahısların dinlemesini tamamen önlemektedir.

Kulaklık kitimi diğer ürünlerlede kullanabilirmiyim?

Kulaklık kitiniz bütün Bluetooth sürüm 1.1 veya daha yukarı sürümlü aygıtlarla uyumludur. Yalnız bu aygıtlar kulaklık kiti veya handsfree profiline uygun olmalıdır. Daha fazla bilgi için uluslararası Bluetooth standartlarına bakınız. **www.bluetooth.com**.

Genel Özellikler

Bluetooth Teknoloji	Sürüm 1.2 Bluetooth Sınıf 2 telsiz, 10 metre uzaklığa kadar, görüş mesafesine göre
Desteklenen Bluetooth profili	Kulaklık kiti ve Handsfree profilli
BataryaTipi	Yeniden şarj edilebilir Lityum-Ion Polimer batarya
Konuşma Süresi*	9 saate kadar
Beklem Süresi*	240 saate kadar
Güç Adaptörü	Çıkış 5V DC, 500 mA
Çıkıs gücü	4 dBm Maks
Kullanılabilir frekans menzili	2.402-2.483 GHz bant

*Bu cep telefonunuzun ayarları, kullanım şekli, ve çevre koşullarına göre değişiklilik gösterebilir.

Güvenlik Bilgileri

Ürününüzü güvenle kullanmak, elektrik şokları, kısadevreler, hasar, yangın, duyma zayıflıkları yada diğer tehlikelerden korumak için bu bilgileri takip ediniz.

NOT Uygunsuz kullanım ürününüzün garanti dışı kılabilir.
Daha fazla bilgi için, ürününüzle birlikte olan garanti belgesini okuyunuz.

- Ürününüzü söküp tamir etmeye çalışmayınız. **Servis için Creative yada yetkili kişilere başvurunuz**.
- Ürününüzü 0°C ile 45°C arasındaki yerler dışında bırakmayınız.
- Ürününüzü veya bataryasını ezilme, delinme veya yanma gibi tehlikelerden koruyunuz.
- Ürününüzü veya bataryasını yüksek manyetik objelerden uzak tutunuz.
- Ürününüzü çarpmalara karşı koruyunuz.
- Ürününüzü veya bataryanızı su ve nemden koruyunuz.
  Eğer ürününüz Nem'e karşı dayanıklı ise (ürün paketine bakınız), ürününüzü suya sokmamaya yada yağmur altında bırakmamaya dikka ediniz.
- Yüksek ses seviyesinde uzun sure müzik dinlemeyiniz.
- Yerleştirilmiş bataryanızı çıkartmaya çalışmayınız. Ürün yerel çevre şartlarına göre yerleştirilmelidir. Bataryanızı değiştirmek için, ürününüzü bulunduğunuz bölgedeki destek ofisine götürünüz. Ürün servis bilgisi için, **www.creative.com**. a giriniz.
- Kulaklık gibi iletken aparatlar CRT televizyon yada CRT monitörler ile yakın halde kullanıldığında elektrostatik boşalıma sebep olabilir. Bu elektrostatik boşalım statik şok olarak hissedilebilir. Bu statik şok zararsızda olsa kulaklıklarınızı CRT aygıtlarına yakın halde kullanmayınız
- Ürününüzü uçakta açmaya veya kullanmaya çalışmayınız.

Daha Fazla Bilgi

Creative Bilgi Merkezi

Teknik sorunlarınız çözmek ve düzeltmek için Creative'in 24 saat kişisel-yardım merkezini kullanabilirsiniz. **www.creative.com**, dan bölgenizi seçerek **Destek** kısmına giriniz.

Ürünü Kaydetme

Ürününüzü kaydettirmek size en uygun servis ve ürün desteğini kullanmanıza olanak sağlar. Ürününüzü yükleme esnasında veya **www.creative.com/register**. dan kaydedebilirsiniz.
Unutmayınızki garanti haklarınız ürünü kayıt ettirmenize bağlı değildir.

Müşteri Destek Hizmetleri ve Garanti

Bu ürünün Türkiye'deki garantı süresi 2 yıldır.

Bu dökümanı ileride danışabilmeniz için saklayınız.

WEEE Simgesinin kullanımı, bu ürüne ev atığı olarak işlem yapılamayacağını gösterir. Bu ürünün doğru şekilde atılmasını sağlayarak, çevre korumasına katkıda bulunmuş olursunuz. Bu ürünün geri dönüşüme tabi tutulması konusunda ayrıntılı bilgi için lütfen ilgili kurumlara ya da ürünü satın olduğunuz mağazaya başvurun.

Telif Hakkı © 2006 Creative Technology Ltd. Bütün hakları saklıdır. Creative logosu birleşik devletler ve/veya diğer devletlerde Creative Technology Ltd. e kayıtlıdır. Microsoft ve Windows; Microsoft kuruluşuna kayıtlıdır. Bluetooth, Bluetooth SIG, Inc., ABD. Ye kayıtlıdır.